

B E D A T & C^o
G E N E V E

Winding, time setting, and date setting for automatic models.

Crown position 1, winding.

This position allows manual winding by gently turning the crown in a clockwise motion. The watch self-winds while being worn. The maximum power reserve of a fully wound automatic watch is approximately 40 hours. The watch will stop if not worn.

***Please note:** caution should be used not to manually over-wind the movement. 8 to 10 gentle manual winds will be sufficient to start your automatic movement.*


Crown position 2, quick set of date.

The date may be adjusted by turning the crown in this position clockwise.

Crown position 3, time setting.

Turn crown clockwise or counter-clockwise to adjust the time.

Push crown in.

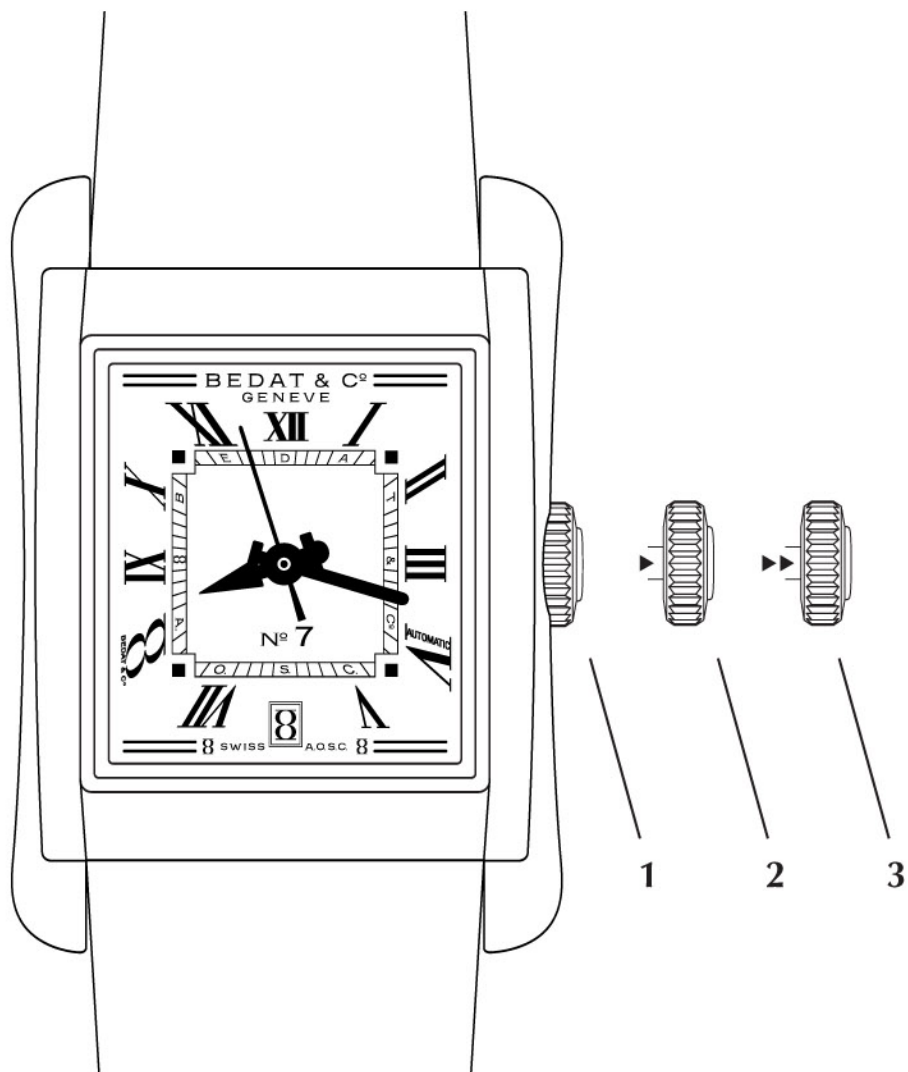

For technical information about ChronoAutomatic, Annual Calendar, Two Time Zones and ChronoPocket please refer to their specific manual guide.
