


B E D A T & C^o
G E N E V E

INSTRUCTION USE BOOKLET

Size adjustment of the leather strap for deployment buckle.

1. Open buckle.
2. Insert the tail of the strap over the top of the pin.
3. Fold the tail of the strap back under the pin (**fig.1**). Adjusting to desired size.
4. Pull strap to lock pin into place.

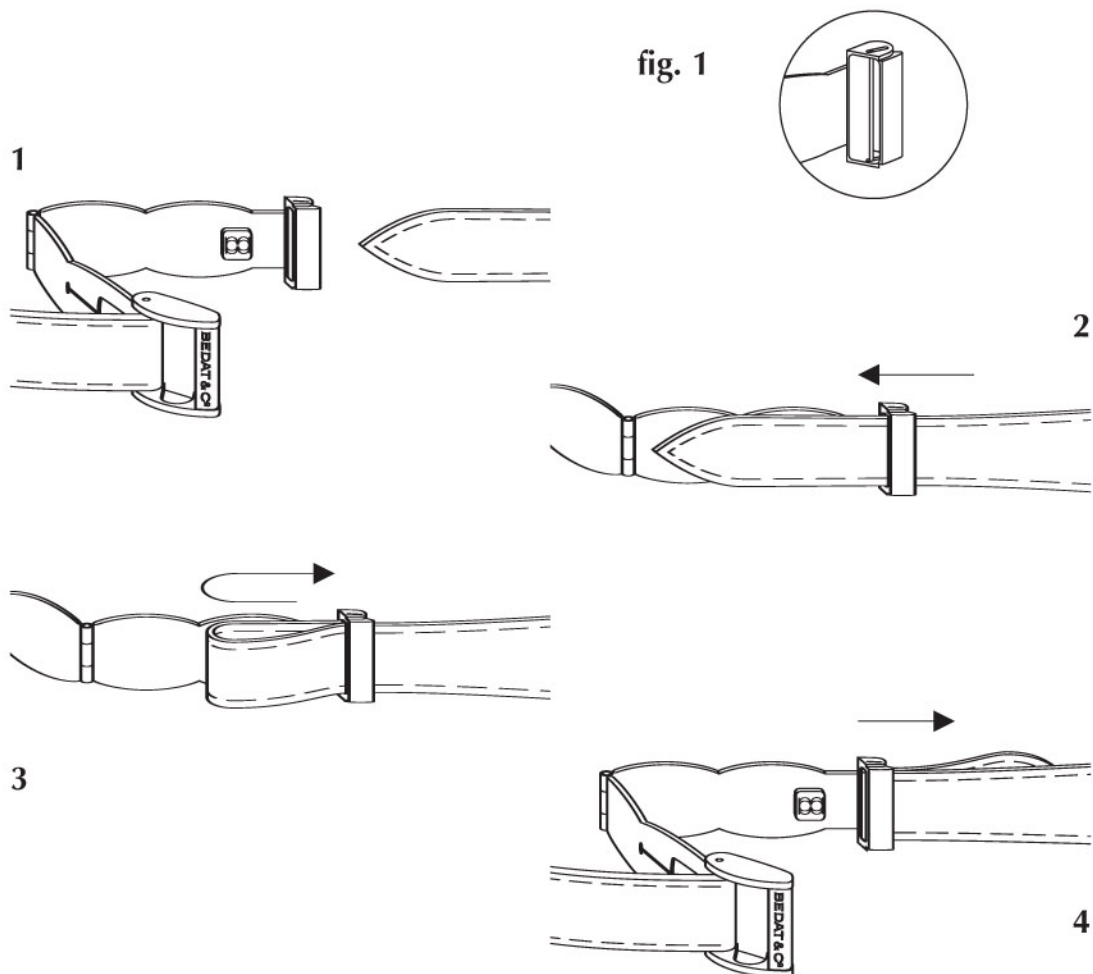

Straps S/M/L/XL in different colours and material upon request and availability.
